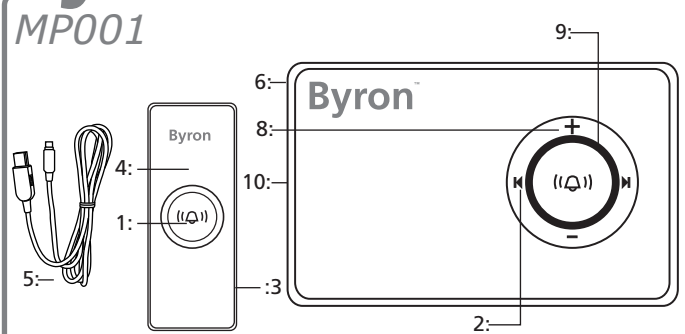 


Byron™ MP3 Downloadable Wire Free Chime Kit



- 1: Push Button
- 2: Melody Selector
- 3: Bell Push Battery
- 4: Signal Sent LED
- 5: USB Lead
- 6: Portable Chime
- 7: Speaker
- 8: Volume Control
- 9: LED Alert
- 10: USB Input

Setup:

1

- Place a small flat screwdriver into the locking clip on the base of the Bell Push.
- Gently twist.
- The backing plate will unclip.

3

- Insert CR2032 battery (Supplied) into the battery holder.
- Make sure the positive side is facing upwards.
- Replace back plate.

Warning: Make sure that the batteries are replaced correctly to avoid battery failure. Only replace with same or equivalent type.

3

- Remove the battery cover.
- Insert 3 X 1.5V Size 'AA' batteries (Not Supplied).
- Make sure the Positive/Negative terminals match the internal markings
- switch the Chime ON
- Replace the battery cover.

4

- Press the Bell Push to confirm the setup
- The Chime will play the melody and the alert light will flash.

Functions:

Melody Selection:

To select a melody for the Door Chime

- Select between preprogrammed (IN) or downloaded MP3 melodies (MP3).
- Press the ► arrows on the door chime to select the next melody
- The chime will play the newly selected melody
- Press the centre button to confirm Or press ► arrows to select the next melody.

Volume Control:

To select the Chime Volume level, press the '+' button increase the volume and '-' button to decrease the volume.

Downloading MP3 Melody:

- Connect the chime to the USB port of a computer using the USB lead (supplied).

PC Only

- The Chime will appear as a USB storage device, install and run MP3 Editor.exe file on your computer.
- Select the open file icon , highlight the required MP3 file on your PC and click Open.

MP3 Editor.exe


- Highlight the MP3 file in the tunes list and press PLAY.
- Edit the file length by inputting the required start and end times. Use the Play/Pause button to listen to the mp3 file, recommended file length is between 8-10sec.

- Press the scissors icon to Cut and save the MP3 file, the recommended file length is approximately **8-10 seconds** long.
- PC & Mac
- Drag and drop the edited file onto the MP3 Chime, the file will be saved on to the MP3 chimes internal memory.

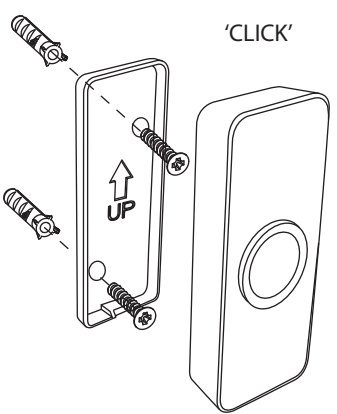 
Video Tutorial:

View or video tutorial saved on the MP3 chime or via our YouTube channel.
<http://www.youtube.com/user/CHByron>

Installation Guide:

1  **Avoid** locating the Bell Push/Chime on or directly near metallic surfaces as this may reduce the operation range.
UPVC Door Frames:
 When locating the bell push onto a UPVC door, always check the operating performance before final installation, internal metal frame may affect performance.
 Tip: Try adjusting the location of the Bell Push to the Left/Right or place on external wall.

Installation Guide: Bell Push

2 

- Using back plate as a template.
- Making sure UP arrow points UP.
- Mark and drill holes.
- Insert wall plugs and attach to wall using screws provided.
- Clip the Bell Push on to the back plate making sure the Bell Push 'Clicks' in to place.

Tip: The Bell Push can be installed using a suitable double sided adhesive tab or tape when drilling is not suitable.

Changing Batteries:

Bell Push:

- Remove back plate from the Bell Push.
- Remove old battery
- Replace with new '23A' 12V battery.
- Insert into holder making sure '+/-' match the internal marking
- Test Chime Kit.

Chime Unit

- Remove old Batteries.
- Insert new batteries, 3 X 1.5V size 'AA'.
- Make sure '+/-' match the internal markings.
- Test Chime Kit.

1 x 12V '23A'

3 x 1.5V 'AA'

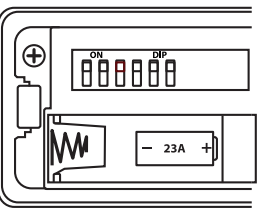 
Always dispose of old batteries in an environmentally friendly way.

User Hints:
 In case of the door chime does not sound, please check the followings:

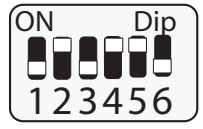 
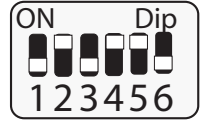 
- Flat batteries in either Push Button or Door Chime.
- Wrong battery polarity in either Push Button or Door Chime.
- For Plug-in Door Chimes make sure the socket is switched on.
- Bell Push and Door Chime are not paired together, see setup guide.
- Materials in between the Bell Push & Chime will reduce the operating range, move the Door Chime closer to the Bell Push
- Wire free devices can be affected by external sources e.g. wire free home alarms or power transformers/adaptor

Address Code:

The MP3 Door Chime, comes preset to a default address code, this code may need to be changed if the chime rings due to a neighbouring door chime or similar wire free product.



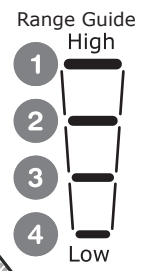 
- Select a new address code in the bell push, by randomly moving the white dip-switch's.
- Copy the new address onto the chimes dip-switch's. Located in the battery compartment of the chime.
- Test the chime kit by pressing the bell push.

e.g. **Bell Push**  = **Chime** 

Installation Guide: Chime

3 Place the door Chime within the operating range, transmission of the wire free signal through Walls, Doors and Ceilings etc, may reduce the operating range. Chime unit for INDOOR use only.

Range Guide



1 High
2
3
4 Low

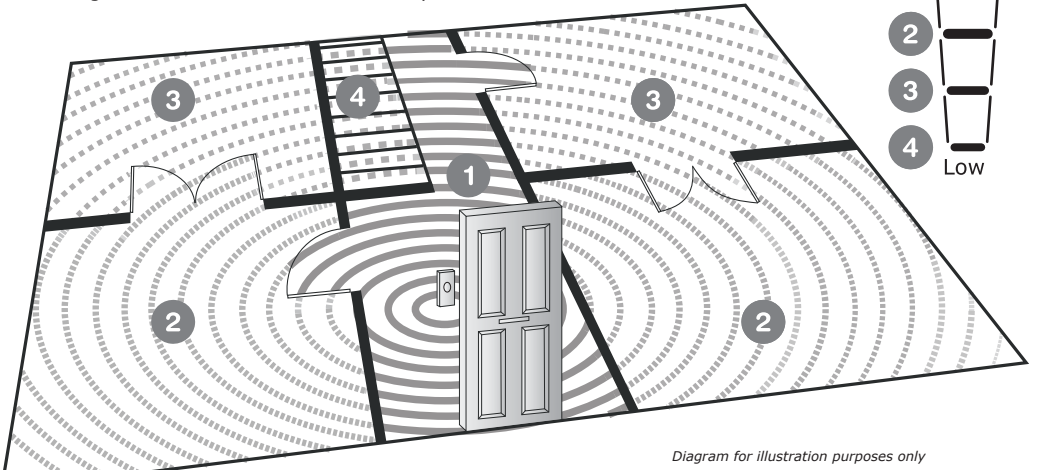 

 



 
Diagram for illustration purposes only


IMPORTANT:

There are no serviceable parts, do not repair. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance.

Specification

IP44  **-40°C to +5°C**  Bell Push: MPT Power: 1 x 23A 12V DC Battery (Included) IP44 Weather Resistant

Indoor use only  **-40°C to +5°C**  Portable Door Chime: MP001/HB702 Power: 3 x AA/LR6 1.5V Batteries (Not supplied) Range: 100 Metres Indoor Use Only




 **Tel: 0845 2301231 (UK)**
 9-5 Mon-Fri, Local call charges apply

 **support@chbyron.com**

 **http://www.chbyron.com**

 **GB: CH Byron**
 Byron House, Sherwood Rd
 Astonfields, Bromsgrove
 B60 3DR
 UK

Byron 433.92MHz

R&TE APPROVED 

A	▲	IRL	▲	UK	▲	M	▲
B	▲	L	▲	BG	▲	N	▲
DK	▲	PL	▲	CZ	▲	SK	▲
FIN	▲	NL	▲	EST	▲	SLO	▲
F	▲	P	▲	H	▲	CH	▲
GR	▲	S	▲	IS	▲	PL	▲
LT	▲	S	▲	LV	▲	RO	▲

CH Byron Electrical United Kingdom. www.chbyron.com